

WORKING TIME ON ONE CHARGE



BATTERY	536Li XP®			T536Li XP®	536LiPX	536LiPT5/ 536LiP4		536LiRX/536LiLX		536LiHE3/536LiHD70X/536LiHD60X		540iBX*/536LiB	
	CARPENTER	PRUNING	LOG CUT	PRUNING	CLEARING	PRUNING	LIGHT	TOUGH	LIGHT	TOUGH	LIGHT	TOUGH	
BLi10	1 h 10 min	30 min	15 min	50 min	30 min	40 min	30 min	15 min	50 min	25 min	15 min	10 min	
BLi20	2 h 25 min	1 h	25 min	1 h 40 min	1 h 5 min	1 h 30 min	1 h 5 min	30 min	1 h 35 min	50 min	30 min	15 min	
BLi100C/ BLi100	1 h 35 min	40 min	15 min	1 h 5 min	40 min	50 min	40 min	20 min	1 h 5 min	30 min	20 min	10 min	
BLi200C/ BLi200	3 h 5 min	1 h 15 min	35 min	2 h 10 min	1 h 25 min	1 h 55 min	1 h 25 min	40 min	2 h 5 min	1 h	35 min	20 min	
BLi300C/ BLi300	5 h 35 min	2 h 15 min	1 h	3 h 55 min	2 h 30 min	3 h 30 min	2 h 30 min	1 h 15 min	3 h 45 min	1 h 50 min	1 h 5 min	40 min	
BLi550X	9 h 20 min	3 h 40 min	1 h 40 min	6 h 30 min	4 h 10 min	5 h 50 min	4 h 10 min	2 h	6 h 10 min	3 h 10 min	1 h 50 min	1 h 10 min	
BLi950X	18 h 40 min	7 h 30 min	3 h 20 min	13 h	8 h 20 min	11 h 30 min	8 h 20 min	4 h 10 min	12 h 20 min	6 h 10 min	3 h 40 min	2 h 10 min	

BATTERY	436Li			436LiB		336LiC		115iL	115iHD45	120i	LC 347VLi / LC 247Li	LC 141VLi / LC 141Li
	CARPENTER	PRUNING	LOG CUT	LIGHT	TOUGH	LIGHT	TOUGH			PRUNING		
BLi10	1 h 10 min	30 min	15 min	15 min	10 min	25 min	15 min	30 min	50 min	—	—	— / 20 min
BLi20	2 h 25 min	1 h	25 min	30 min	15 min	50 min	30 min	1 h	1 h 35 min	35 min	15 / 20 min	25 / 30 min
BLi100C/ BLi100	1 h 35 min	40 min	15 min	20 min	10 min	30 min	20 min	40 min	1 h 5 min	—	—	— / 25 min
BLi200C/ BLi200	3 h 5 min	1 h 15 min	35 min	35 min	20 min	1 h	35 min	1 h 15 min	2 h 5 min	45 min	20 / 25 min	30 / 35 min
BLi300C/ BLi300	5 h 35 min	2 h 15 min	1 h	1 h 5 min	40 min	1 h 50 min	1 h 5 min	—	—	—	40 / 45 min	1 h / 1 h 5 min
BLi550X	10 h 20 min	4 h 10 min	2 h	1 h 50 min	1 h 10 min	3 h 10 min	1 h 50 min	3 h	4 h	1 h 30 min	—	—
BLi950X	20 h 30 min	8 h 20 min	4 h	3 h 40 min	2 h 10 min	6 h 10 min	3 h 40 min	5 h 30 min	7 h 30 min	3 h	—	—

The runtimes are up-to times and correspond to work time using saveE™: actual work, basic maintenance and movement / climbing needed for generic operations.
500 series – Full time user 300/400 series – Part-time user 100 series – Occasional user *Requires BLi backpack batteries.

Best option

CHARGING TIME FOR DIFFERENT BATTERIES AND CHARGERS



BATTERY / CHARGER		QC500		QC330		QC80		QC80F	
		CHARGING LEVEL		CHARGING LEVEL		CHARGING LEVEL		CHARGING LEVEL	
		80%	100%	80%	100%	80%	100%	80%	100%
	BLi10	25 min	40 min	25 min	40 min	50 min	1 h 10 min	50 min	1 h 10 min
	BLi20	25 min	40 min	25 min	40 min	1 h 50 min	2 h 10 min	1 h 50 min	2 h 10 min
	BLi100C/ BLi100	30 min	50 min	30 min	50 min	1 h 5 min	1 h 25 min	1 h 5 min	1 h 25 min
	BLi200C/ BLi200	30 min	50 min	30 min	50 min	2 h 25 min	2 h 40 min	2 h 25 min	2 h 40 min
	BLi300C/ BLi300	35 min	1 h	55 min	1 h 20 min	4 h	4 h 20 min	4 h	4 h 20 min
	BLi550X	55 min	1 h 20 min	1 h 30 min	1 h 55 min	-	-	-	-
	BLi950X	1 h 25 min	2 h 25 min	2 h 30 min	3 h 25 min	-	-	-	-

Copyright © 2018 Husqvarna AB (publ). All rights reserved.
Husqvarna and other product and feature marks are trademarks
of the Husqvarna Group as displayed at www.international.husqvarna.com

www.husqvarna.com

Husqvarna AB, Drottninggatan, SE 561 82 HUSKVARNA, SWEDEN
+46 36 14 65 00,



Husqvarna
READY WHEN YOU ARE